

Alcomonitor CC

Alcomonitor CC



DRUG TESTING INSTRUMENTS

- Totally automatic Accuracy Checks
- Use beverage straws as mouthpiece
- Print results directly on Alcohol Test Form
- DOT or Quick Screen version

ALCOPRO
DRUG & ALCOHOL TESTING PRODUCTS

1-800-227-9890
www.alcopro.com

Alcomonitor CC



Automatic Accuracy Checks

The Alcomonitor CC performs totally automatic, hands-off accuracy checks using an Alcohol Gas Tank installed in the base of the instrument. The operator programs the instrument to perform accuracy checks monthly, weekly, or daily. At the pre-determined time the Alcomonitor starts the accuracy check without the need operator for an operator to be present. Automatic accuracy checks require no operator skill and ensure 100% compliance with quality assurance programs.

DOT Version – Two Year Warranty

The DOT version of the Alcomonitor CC steps the operator through the DOT protocol to ensure that every test is performed correctly. The instrument displays a unique test number, prompts the operator to enter a subject identification number, counts down the required 15- minute waiting period after every positive screening test, and then automatically starts a confirmation test. The Slip Printer significantly shortens the test process by printing results directly on the Alcohol Test Form, eliminating the need to attach results with tamper evident tape.

Quick Screen Version

The Quick Screen version provides the simplest and fastest way to perform a test and is the choice of corrections agencies and alcohol treatment programs. The operator presses the Start button and within seconds the instrument is ready for the subject to blow into the instrument. The instrument alerts the operator to positive screening results, after which the operator has the option to perform and print a confirmation test.

Beverage Straws = Low Operating Cost

Intoximeters designed the Alcomonitor to use individually wrapped beverage straws as mouthpieces. Because beverage straws cost approximately one cent each compared to approximately \$.20 each for a mouthpiece, the savings in mouthpieces can sometimes pay for the instrument.


SPECIFICATIONS

Sensor type: Electrochemical Oxidation (fuel cell)
Range of measurement: .000 - .400 BrAC
Accuracy and precision: U.S. DOT approved for evidential use
Breath sampling: Automatic with manual override
Response time: 3 - 5 seconds negative results 5 - 15 seconds positive results
Power requirement: 120-volt AC current
Test mode: Direct
Calibration: Microprocessor controlled using internal gas tank
Memory: Reprint last test and 1,000 tests with memory dump
Print capability: Yes, Slip Printer
Size: Height 5 1/2", Width 17 3/4", Depth 16 1/2", 14 lbs
Warranty: Quick Screen Version - One year parts and labor DOT Version – Two year parts and labor

RELATED ITEMS



#324-04
Alcohol Gas Tank
108 liter
\$165.00

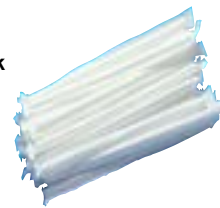

#209
Beverage Straws
500/box
\$5.00

ALCOMONITOR CC

Item	Description	Price
327-DOT	Alcomonitor CC with Slip Printer; DOT version Alcohol Gas Tank, Slip Printer; ink cartridge, connecting cables, box of straws, 100 DOT forms– <i>Two year warranty</i>	\$4,650.00
327	Alcomonitor CC with Slip Printer Quick Screen version includes: Alcohol Gas Tank, Slip Printer; ink cartridge, connecting cables, box of straws <i>One year warranty</i>	\$4,525.00

For Information & Orders Call: **1-800-227-9890**
Order 24 Hours A Day At: **www.alcopro.com**
Fax Orders To: **1-800-655-5834**

ALCOPRO
DRUG & ALCOHOL TESTING PRODUCTS