



BreathLogix®

Unmanned Breath Alcohol Testing

Automatically Screen Individuals for Alcohol


BreathLogix® is a compact wall-mounted breath alcohol tester that quickly screens the individual's breath for alcohol. BreathLogix is designed for unmanned rapid testing of large and small people groups, delivering pass/fail and 3-digit BrAC results.

The intuitive touch screen display and audio prompts guide the individual through a self-test, saving an organization valuable time and money in resource allocation.

A camera captures the individual's image at the start of the test and as they provide a breath sample, providing a complete chain of custody.

Program Uses

- Ideal for non-regulated workplace testing, the BreathLogix breath alcohol tester is able to screen employees, contractors, or visitors as part of security and access control protocols, or to screen employees before they start work.
- Use BreathLogix in probations, 24/7 sobriety programs or in shelters to initiate unmanned testing.

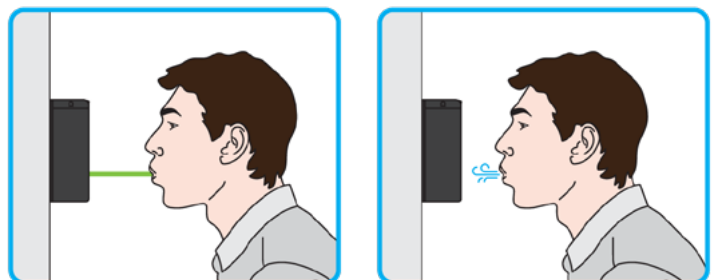


SPECIFICATIONS

Sensor Type:	Fuel Cell	Calibration:	Pre-calibrated cartridge replaced annually
Measurement:	.000 - .300 BrAC	Memory:	Internal Memory which can be saved to USB drive or uploaded to a cloud-based data management system
Breath Sampling:	Automatic	Display:	5" capacitive touch screen
Response Time:	Results under 20 sec.	Material	Durable ABS plastic
Power:	12 Volt DC power adapter	Operating Temp:	32° - 113°F (0° - 45° C)
Test Modes:	Direct (straw); Contactless	Size:	6.3 x 7 x 2.7" - 2.2 lbs

FEATURES

- Audio and visual prompts administer self-tests
- Camera captures test subject's images providing a complete chain of custody
- Delivers Pass/Fail results and a three-digit BrAC level
- Email and text notifications of test results
- Wi-Fi and Bluetooth enabled
- Internal data storage or upload to cloud-based data management
- USB port to download test records
- Optional integration hub allows for integration with other security devices
- Optional thermal printer
- Mount it to a wall or on the optional stand

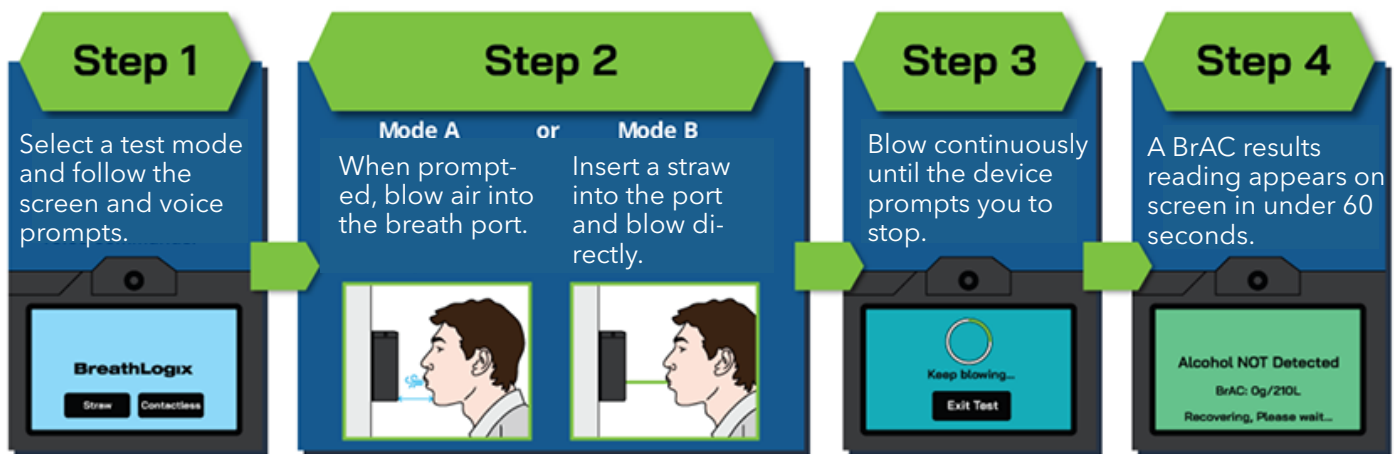

Standard Equipment:

- 5" touchscreen display
- Built-in camera and speakers
- WiFi, Bluetooth enabled
- USB port
- Internal memory
- Pre-calibrated fuel cell cartridge
- Cloud database and SMS text/email notifications are added features

Visit alcopro.com/breathlogix for packages and pricing.